




Plastic cover for angle valve

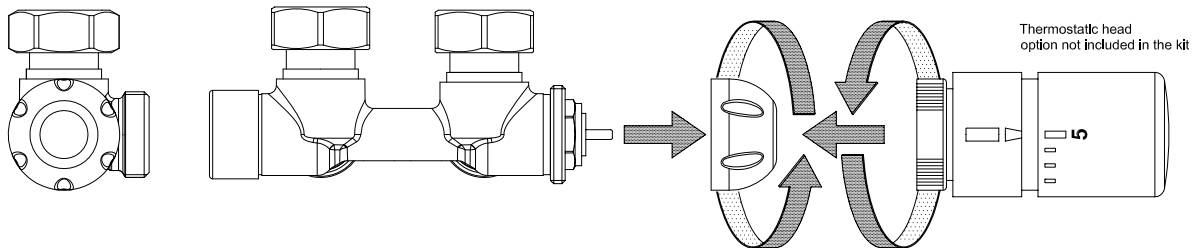

Remove the protection cap and install the thermostatic head

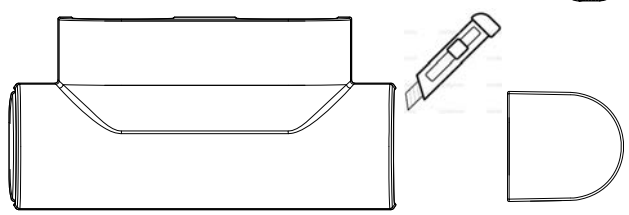

Remove the side cover with help of a cutter

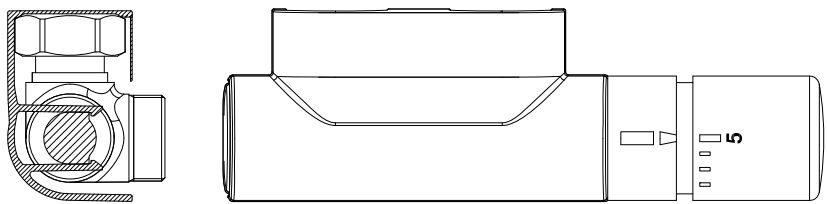

Place the cover on the body of valve on the customed hooks